

Comfort functions

Room heater (On X2 only)

入切
室暖

To warm up the restroom.

入切
冷込防止

To start warming up the restroom when the room temperature drops below 5°C.

入切
タイマー

To start warming up the restroom at the preset hour everyday.
(You can choose from room heat hours 3, 6 or 9.)

Example

For room heat for 3 hours
(5:00 - 8:00am).

1

Set the room heating time.

● Select "3H" for room heater hours.

入切
タイマー

AM 10:00 3H
水勢 洗浄位置
タイマー
開始時刻

2

Set the start time.

● Set room heat start time to "AM 5:00".

時刻設定

時 分
5 00
セット

AM 5:00 3H
水勢 洗浄位置
タイマー
開始時刻

finish


The timer starts heating room at the preset time.

時刻設定

時 分
セット

● Current time can be set.

● When to start saving-power and heating room can be timer-controlled.

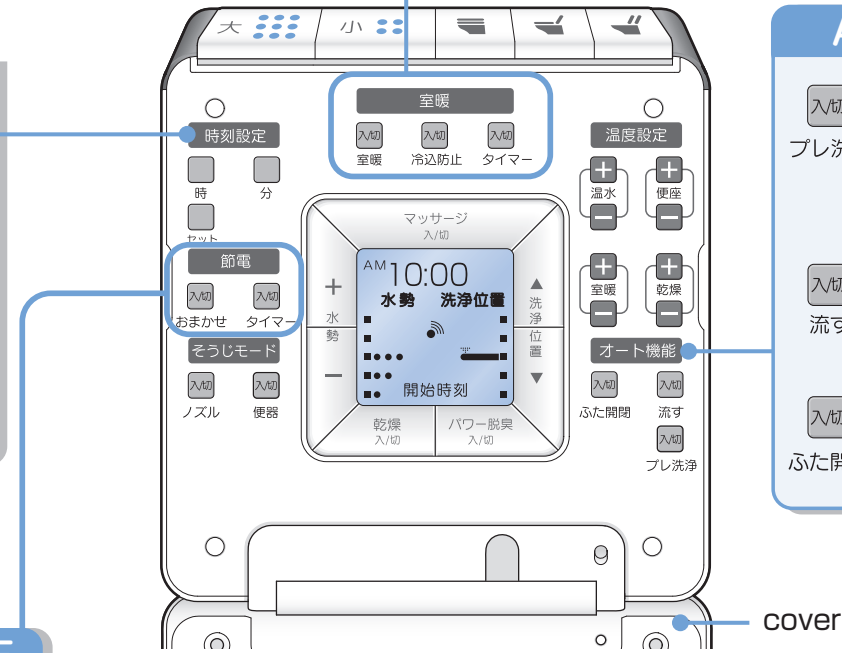

Auto functions

入切
プレ洗浄

Sit down on the seat, and a small amount of water starts flowing to keep the inside of the bowl wet and clean.

入切
流す

When you leave the seat, the toilet is flushed automatically.

入切
ふた開閉

The sensor senses a person for the lid open and close itself.

POWER SAVE

入切
おまかせ

Hours which the toilet is least used are memorized. The seat temperature is automatically kept low during these hours to save power.

For super memory power saving

During the time when the toilet is not used with memory power saving being ON, the toilet seat heater is automatically turned ON for power saving.

1

Press this switch.

入切
おまかせ

おまかせ
水勢 洗浄位置

finish

Memory power save starting.

2

Press this switch again.

入切
おまかせ

スーパー おまかせ
水勢 洗浄位置

finish

Super memory power save starting.

Example

For power save for 6 hours
(1:00 - 7:00am).

1

Set the power save time.

● Select "6H" for power save hours.

入切
タイマー

AM 10:00 6H
水勢 洗浄位置
タイマー
開始時刻

2

Set the start time.

● Set power save start time to "AM 1:00".

時刻設定

時 分
1 00
セット

AM 1:00 6H
水勢 洗浄位置
タイマー
開始時刻

finish

The timer starts saving power at the preset time.

TOTO

HOW TO USE

WASHLET
NEOREST X1/X2

● This sheet can be hung on the wall by hooks supplied with the product.

Flushing

Stool

Urine

大 小

The toilet can be flushed with the remote controller.

When the remote controller battery has run down

運転 入切

流す 大 入切

ビデ 入切

おしり 入切

Flush out switch

In case of power failure

Open the cover at the right and turn the Bowl clean-up lever to flush the toilet.

Pull

Bowl clean-up lever

Press and open the cover.

Open and close the seat and lid

閉

To close both the seat and lid.

開

To open the lid and close the seat.

開

To open both the seat and lid.

Stopping

止

To stop washing and drying.

Drying

乾燥 入切

To blow warm air and dry refreshed.

Extra deodorizing

パワー脱臭 入切

Suction force is increased for extra deodorizing.

Washing

おしり ムーブ入切

To wash the bottom.

やわらか ムーブ入切

To wash the bottom with mild spray.

ビデ ムーブ入切

For ladies.

Adjustment of water squirting force and washing position

Water squirting force STRONG

Water squirting force WEAK

Washing position FRONT

Washing position REAR

Comfortable washing

やわらか ムーブ入切

ビデ ムーブ入切

おしり ムーブ入切

Press this twice.

マッサージ 入切

The nozzle moves back and forth during washing.

Water pressure changes for washing the bottom.

TEMP ADJUST

Open the cover for use. (illust:X2)

TEMP ADJUST

温度設定

温水 便座

室温 乾燥

Main control panel

運転 入切

流す 大 入切

ビデ 入切

おしり 入切

※ Use these buttons if the batteries of the remote control are dead.

2007.7.24

◆ Washlet is TOTO's registered trademark.