

# Comfort functions

## Room heater (On X2 only)

- 室暖** To warm up the restroom.
- 冷感防止** To start warming up the restroom when the room temperature drops below 5°C.

- タイマー** To start warming up the restroom at the preset hour everyday. (You can choose from room heat hours 3, 6 or 9.)

### Example

For room heat for 3 hours (5:00 - 8:00am).

- 1 Set the room heating time.** Press the button at a startup time (5 am).
  - 2 Set the start time.** Select "3" for the room heat hours.
- finish** The timer starts heating room at the preset time.



## Auto functions

- ブラ洗浄** Sit down on the seat, and a small amount of water starts flowing to keep the inside of the bowl wet and clean.
- 流す** When you leave the seat, the toilet is flushed automatically.
- ふた開閉** The sensor senses a person for the lid to open and close itself.

## POWER SAVE

- おまかせ** Hours which the toilet is least used are memorized. The seat temperature is automatically kept low during these hours to save power.

- 1 Press this switch.** Memory power save starting.

- おまかせ** Press this switch.

- タイマー** Once preset, the seat heater turn off at the preset hour everyday to save power. (You can choose from power save hours 3, 6 or 9.)

- 1 Set the power save time.** Press POWER SAVE [ON/OFF] at a desired power-save start hour (1:00am).
  - 2 Set the start time.** Select the power-saving time "6".
- finish** The timer starts saving power at the preset time.

# TOTO

## HOW TO USE

## WASHLET NEOREST X1/X2


This sheet can be hung on the wall by hooks supplied with the product.

### Flushing

- Stool** 大
- Urine** 小


The toilet can be flushed with the remote controller.

When the remote controller battery has run down

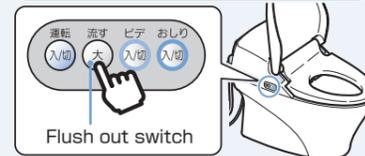

### In case of power failure

Open the cover at the right and turn the Bowl clean-up lever to flush the toilet.

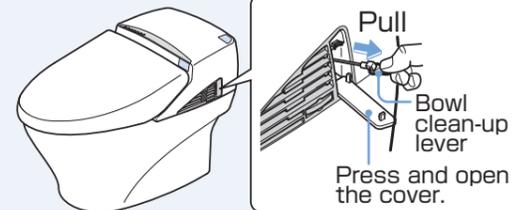

### Open and close the seat and lid


- To close both the seat and lid.
- To open the lid and close the seat.
- To open both the seat and lid.

### Extra deodorizing

- パワ-脱臭 Suction force is increased for extra deodorizing.

### Drying

- 乾燥 To blow warm air and dry refreshed.

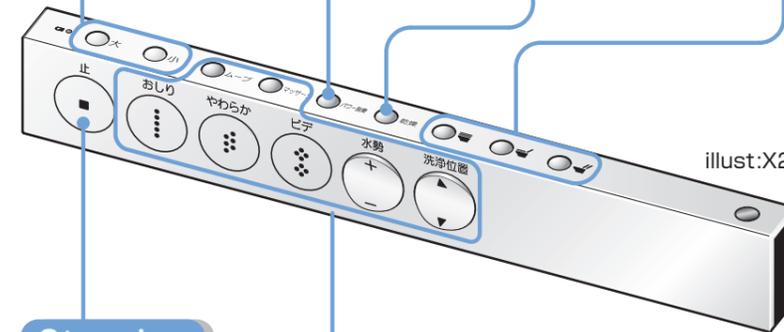

### Washing

- おしり To wash the bottom.
- やわらか To wash the bottom with mild spray.
- ビデ For ladies.

Adjustment of water squirting force and washing position

- Water pressure and wash position are adjusted.



※Standard wash force and position are resumed each time the bottom, gentle or bidet button is pressed.

### Comfortable washing

- ムーブ The nozzle moves back and forth during washing.
- マッサージ Water pressure changes for washing the bottom.


### Stopping

- 止 To stop washing and drying.


### TEMP ADJUST (illustr:X2)

Unhook the remote controller for use.

Press the temperature selector and use the temperature adjustor.

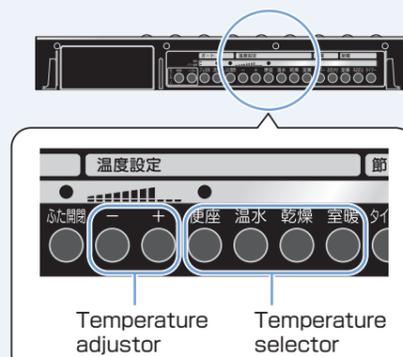

### Main control panel

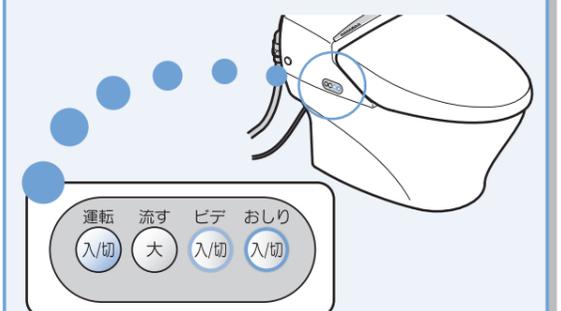

※Use these buttons if the batteries of the remote control are dead.