

Comfort functions

Clock

時刻設定
時 分
セット

- Current time can be set.
- When to start saving power and heating room can be timer-controlled.

Room heater

入切 室暖 To warm up the restroom.
入切 冷込防止 To start warming up the restroom when the room temperature drops below 5°C.

入切 タイマー To start warming up the restroom at the preset hour everyday. (You can choose from room heat hours 3, 6 or 9.)
Example For room heat for 3 hours (5:00 - 8:00am).

- Set the room heating time.
Select "3H" for room heater hours.
- Set the start time.
Set room heat start time to "AM 5:00".

finish The timer starts heating room at the preset time.

Auto functions

入切 プレ洗浄 Sit down on the seat, and a small amount of water starts flowing to keep the inside of the bowl wet and clean.

入切 流す When you leave the seat, the toilet is flushed automatically.

入切 ふたの開閉 The sensor senses a person for the lid open and close itself.

POWER SAVE

入切 おまかせ Hours which the toilet is least used are memorized. The seat temperature is automatically kept low during these hours to save power.

For super memory power saving During the time when the toilet is not used with memory power saving being ON, the toilet seat heater is automatically turned ON for power saving.

- Press this switch.
おまかせ Memory power save starting.
- Press this switch again.
スーパーおまかせ Super memory power save starting.

finish

入切 タイマー Once preset, the seat heater turn off at the preset hour everyday to save power. (You can choose from power save hours 3, 6 or 9.)
Example For power save for 6 hours (1:00 - 7:00am).

- Set the power save time.
Select "6H" for power save hours.
- Set the start time.
Set power save start time to "AM 1:00".

finish The timer starts saving power at the preset time.

Musical remote controller

⏸ To program a skip of music etc. Or enable the use of a voice guide.

⏪ ⏩ To adjust the volume.

EQ Changes sound quality.

AUTO Turn ON/OFF the auto sound.

MODE To select random and repeat playback.

音姫 Press to play back flushing sound to muffle toilet sound. (25 seconds)

▶/■ To playback and stop music.

⏪ ⏩ These buttons have the functions mentioned below.

Forward and revers skip of music	Locates a desired music while no music is played back.
Intro scan of music	Performs an intro scan of the next/current music when the buttons are simply pressed during playback.
Forward and revers quick scan of music	Performs a forward/reverse quick scan of music when the buttons are pressed and held.

TOTO

HOW TO USE

WASHLET NEOREST X3

● This sheet can be hung on the wall by hooks supplied with the product.

Flushing

Stool Urine
大 小

The toilet can be flushed with the remote controller.

When the remote controller battery has run down
Flush out switch

In case of power failure
Open the cover at the right and turn the Bowl clean-up lever to flush the toilet.

Pull Bowl clean-up lever
Press and open the cover.

Open and close the seat and lid

- To close both the seat and lid.
- To open the lid and close the seat.
- To open both the seat and lid.

Stopping

止 To stop washing and drying.

Washing

おしり ムーブ入/切 To wash the bottom.
やわらか ムーブ入/切 To wash the bottom with mild spray.
ビデ ムーブ入/切 For ladies.

Adjustment of water squirting force and washing position
Water squirting force STRONG
Water squirting force WEAK
Washing position FRONT
Washing position REAR

Comfortable washing

やわらか ムーブ入/切 ビデ ムーブ入/切 Press this twice.
おしり ムーブ入/切

マッサージ 入/切
The nozzle moves back and forth during washing.
Water pressure changes for washing the bottom.

Drying

乾燥 入/切 To blow warm air and dry refreshed.

Extra deodorizing

パワー脱臭 入/切 Suction force is increased for extra deodorizing.

TEMP ADJUST

Open the cover for use.

TEMP ADJUST
温度設定
+ 温水 + 便座
- 乾燥

Main control panel

運転 流す ビデ おしり
入/切 大 入/切 入/切

※ Use these buttons if the batteries of the remote control are dead.