

Press a button on the Washlet control panel; a beep sounds when the main unit receives the signal.

## STOP



止

Stops rear washing and other operating functions.

## WASH



おしり

ムーブ入/切

Washing the rear.



やわらか

ムーブ入/切

For washing rear using mild water pressure.





ビデ

ムーブ入/切

Serves as a bidet for ladies.

OSCILLATING

- If you press the button again during use, the wand moves back and forth so that you can wash your rear thoroughly.

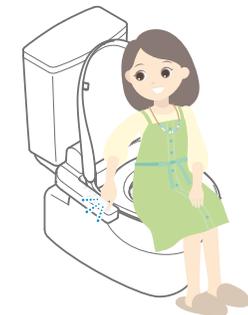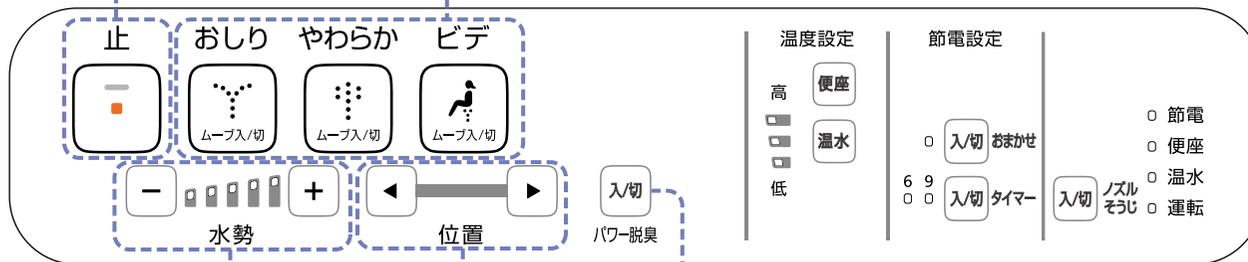

- The function that can be used when you press the “REAR”, “SOFT REAR” or “BIDET” button during use.

WATER PRESSURE ADJUSTMENT (5 steps.)


WASH POSITION ADJUSTMENT (5 steps.)

POWER DEODORIZER

- Increases air suction power for powerful deodorization.

More comfortable! More Energy-Savings!

# How to Use

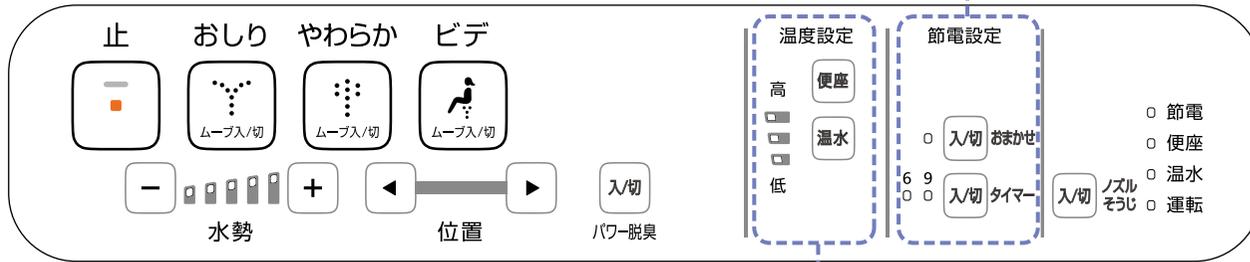

## Temperature Adjustment

Temperature can be changed to "Warm Water" and "Toilet Seat".

Displaying the temperature level of the pressed button

温度設定 Toile seat temperature adjustment button

便座 Warm water temperature adjustment button

温水

高

低

1 便座 温水

Press the button of the temperature you want to change.

2 Press the button selected in step 1 repeatedly until a desired temperature level lights up.

高

高

高

高

低

低

低

低

OFF LOW MEDIUM HIGH

LED goes out.

Setting completed

## Energy-Saving Features

Recommended energy-saving!

Default setting "ON"

### AUTO ENERGY-SAVING FUNCTION

The Washlet memorizes the time slot when the toilet is used less frequently and lowers the toilet seat temperature automatically to save energy.

※It takes approximately 10 days to determine the time slot where the toilet is used less frequently.

You can turn the feature ON/OFF at your discretion.

Press the 入/切 おまかせ

入/切 おまかせ ON To turn the auto energy-saving function "ON"

入/切 おまかせ OFF To turn "OFF" LED goes out.

### ENERGY-SAVING TIMER

Once set, the toilet seat heater turns off everyday at that time to save energy. (The energy-saving time period can be set to 6 or 9 hours.)

Example When using energy-saving function for 6 hours(1:00 - 7:00am).

When the time (1:00 am) you want to start energy saving function is reached, press the 入/切 タイマー button repeatedly until the "6" LED lights up.

6 9 入/切 タイマー

Setting completed

6 9 入/切 タイマー 6 hours

6 9 入/切 タイマー 9 hours

6 9 入/切 タイマー OFF LED goes out.