

◆“Washlet” is a registered trademark of TOTO.

# Standard Use

Press a button on the remote control; a beep sounds when the top unit receives the signal.

## WASH

**For washing rear using mild water pressure.**

**Washing the rear.**

**Serves as a bidet for ladies.**

**OSCILLATING**

 
- If you press the button again during use, the wand moves back and forth so that you can wash your rear thoroughly.

**Dries wet parts using warm air.**

## DRY

## STOP

**Stops rear washing and other operating functions.**

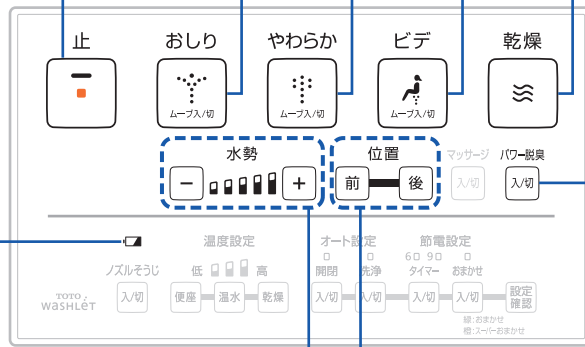

**POWER DEODORIZE**

- Increases air suction power for powerful deodorization.

● The function that can be used when you press the “REAR”, “SOFT REAR” or “BIDET” button during use.

**■ WATER PRESSURE ADJUSTMENT (5 steps.)**

- If you press the water pressure adjustment button, the lamp lights for about 10 seconds at the preset position.

水勢

**■ WASH POSITION ADJUSTMENT (5 steps.)**

- The wand returns to the standard position (3rd step) each time the wash button (“REAR”, “SOFT REAR” or “BIDET”) is pressed.

水勢

## FLUSH

**Full flush**

- Up to 10 m of toilet paper (single)

**Half flush**

- Up to 3 m of toilet paper (single)

 
**A small volume of water is used to flush the toilet bowl clean.**

- Use this if the toilet paper is not flushed away.

## OPEN / CLOSE

**Opens and closes the toilet seat.**

**Toilet lid opens and closes.**

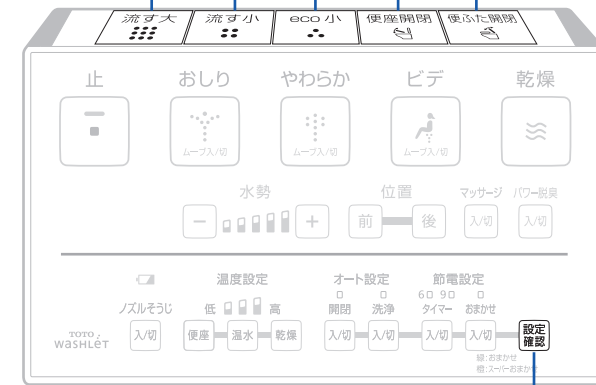

**Setting confirmation**

 
- The current settings can be checked from the LED.

More comfortable! More Energy-Savings!


# How to Use

## Temperature Adjustment


Temperature can be changed to "Warm Water", "Toilet Seat" and "Warm Air" (only models equipped with warm air dryer)

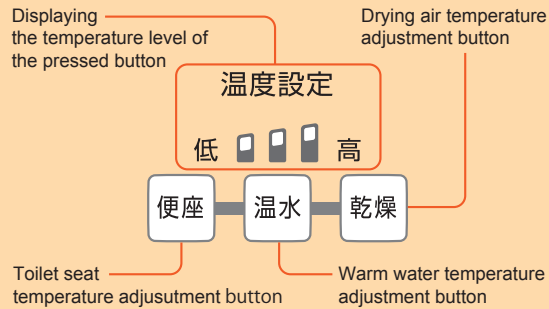

 - 1 便座 温水 乾燥  
Press the button of the temperature you want to change.
- 2 Press the button selected in step 1 repeatedly until a desired temperature level lights up.

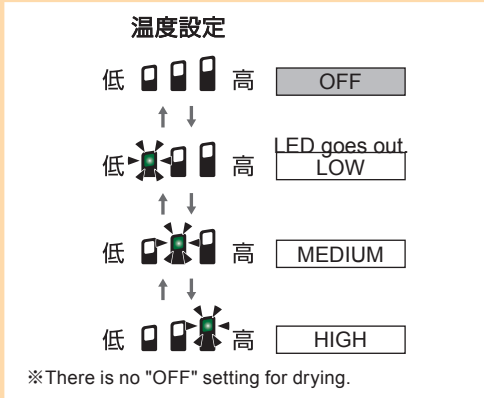

 If the button is not pressed for about 10 seconds, the temperature adjustment LED will go off, but the setting will be retained.  
If the temperature adjustment LED goes out before the setting is completed, start all over again at step 1.

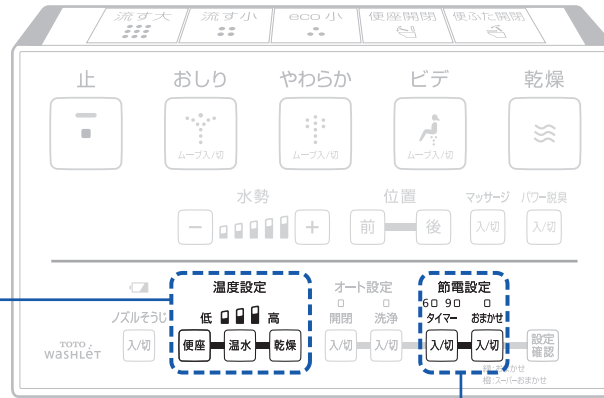

## Energy-Saving Features

Recommended energy-saving!

 
Default setting "ON"

### AUTO ENERGY-SAVING FUNCTION

The Washlet memorizes the time slot when the toilet is used less frequently and lowers the toilet seat temperature automatically to save energy.

※It takes approximately 10 days to determine the time slot where the toilet is used less frequently.

You can turn the feature ON/OFF at your discretion.

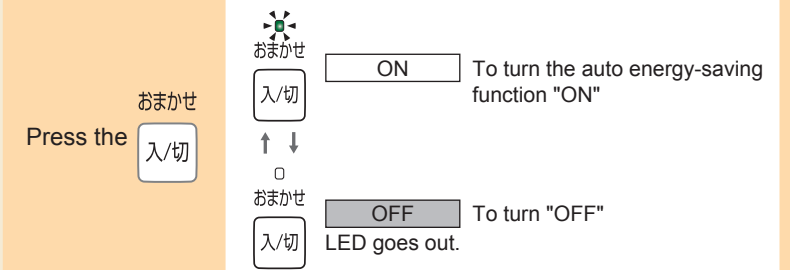

### ENERGY-SAVING TIMER

Once set, the toilet seat heater turns off everyday at that time to save energy. (The energy-saving time period can be set to 6 or 9 hours.)

Example When using energy-saving function for 6 hours(1:00 - 7:00am).

When the time (1:00 am) you want to start energy saving function is reached, press the 'おまかせ タイマー 入/切' (Auto timer ON/OFF) button repeatedly until the "6" LED lights up.

