

Standard Use

Press a button on the remote control; a beep sounds when the top unit receives the signal.

Washing

For washing rear using mild water pressure.

Cleanses your rear.

Cleanses your front (for ladies).

OSCILLATING

 
- If you press the button again during use, the wand moves back and forth so that you can wash your rear thoroughly.

Drying

Dries wet parts using warm air.

Stopping

Stops the operation.

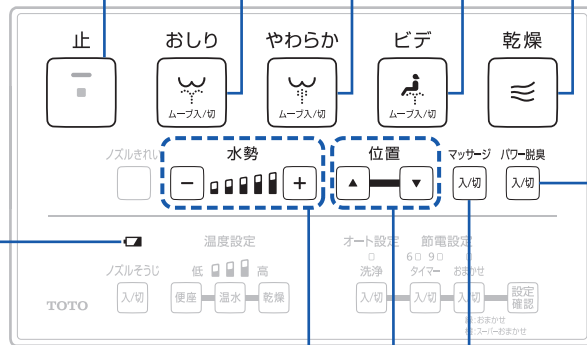

Low Battery warning mark

POWER DEODORIZER
 • Increases air suction power for powerful deodorization.

● The function that can be used when you press the "REAR", "SOFT REAR" or "BIDET" button during use.

■ **MASSAGE** • Washes with the water pressure pulsating between soft and strong.

■ WATER PRESSURE ADJUSTMENT (5 steps.)

- If you press the water pressure adjustment button, the lamp lights for about 10 seconds at the preset position.
- If you press a wash button (Rear, Soft or Bidet), the lamp lights for about 10 seconds at the preset position.



■ WASH POSITION ADJUSTMENT (5 steps.)

- The wand returns to the standard position (3rd step) each time the wash button ("REAR", "SOFT REAR" or "BIDET") is pressed.

 
Flushing

Full flush

Half flush

A small volume of water is used to flush the toilet bowl clean.
 • Use this if the toilet paper is not flushed away.



AUTO WAND CLEANING
 • The wand is cleaned with clean sterilized water.

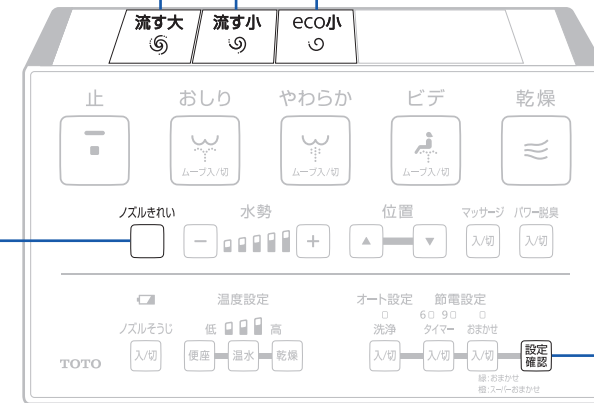

Setting confirmation
 • The current settings can be checked from the LED.

■ You can flush the toilet bowl using the manual lever (for toilet bowl flushing in power failure) during power failure.

  ■ The toilet bowl can also be flushed clean using the buttons on the left side of the Washlet.

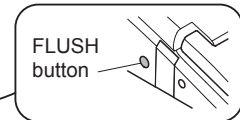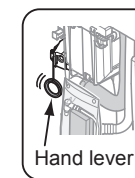


More comfortable! More Energy-Savings!


How to Use

Temperature Adjustment

 
Temperature can be changed to "Warm Water", "Toilet Seat" and "Warm Air" (only models equipped with warm air dryer)

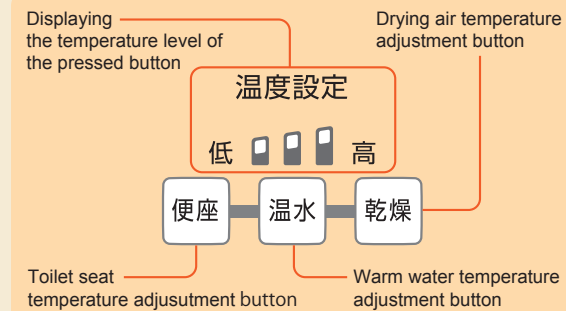

 - 1 便座 温水 乾燥
Press the button of the temperature you want to change.
- 2 Press the button selected in step 1 repeatedly until a desired temperature level lights up.

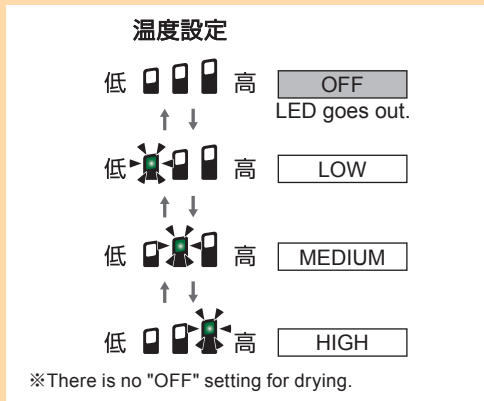

 If the button is not pressed for about 10 seconds, the temperature adjustment LED will go off, but the setting will be retained.
If the temperature adjustment LED goes out before the setting is completed, start all over again at step 1.

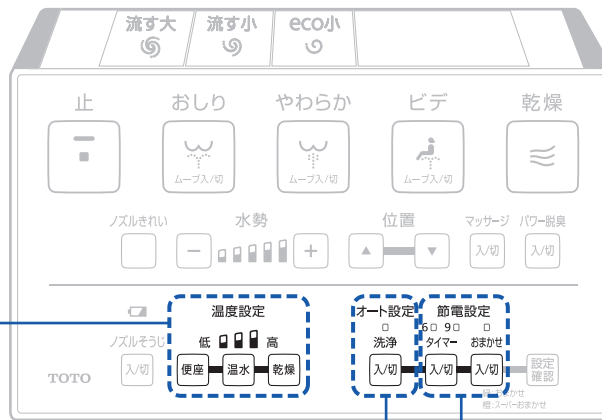

Auto Flushing ON/OFF

オート設定

洗浄

入切

When you stand up from the seat, the toilet bowl is flushed automatically.

 
Energy Saver Features

Auto energy saver

The Washlet memorizes the time slot when the toilet is used less frequently and lowers the toilet seat temperature automatically to save energy.

Auto energy saver plus

In addition to the auto energy saver feature, it automatically turns off the toilet seat heater during time periods when the toilet is never used.

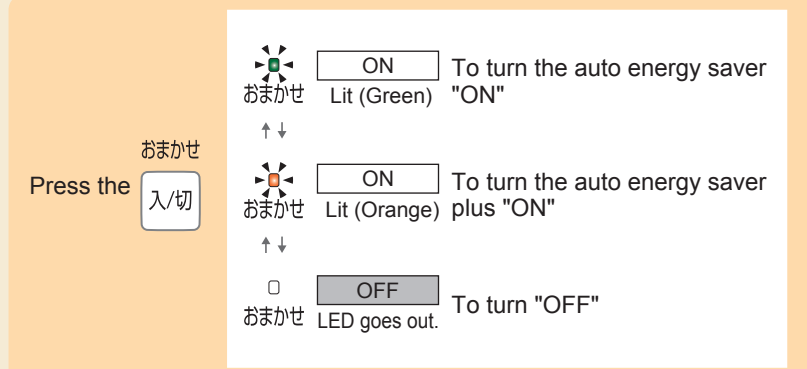

Timer energy saver

Once set, the toilet seat heater turns off everyday at that time to save energy. (The energy-saving time period can be set to 6 or 9 hours.)

Example When using energy-saving function for 6 hours(1:00 - 7:00am).

When the time (1:00 am) you want to start energy saving function is reached, press the **入切** button repeatedly until the "6" LED lights up.

6 9 入切

Setting completed

