

Standard Use

Press a button on the remote control; a beep sounds when the top unit receives the signal.

Washing

For washing rear using mild water pressure.

Cleanses your rear.

 
Cleanses your front (for ladies).

Drying

Dries wet parts using warm air.

Stopping

Stops the operation.

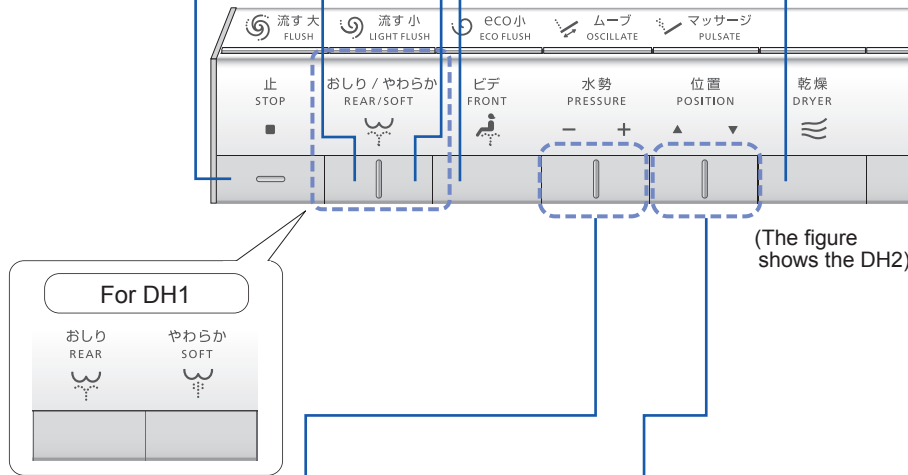

● The function that can be used when you press the "REAR", "SOFT" or "BIDET" button during use.

■PRESSURE

You can adjust the water pressure to one of five levels. ("-" : Softer, "+" : Stronger)

■POSITION

You can adjust the washing position to 5 different points between the front and the rear, using the "▲" and "▼" buttons.

※ When you press the button to flush, the position returns to the standard position (3rd position).

Flushing

Full flush

Light flush

A small volume of water is used to flush the toilet bowl clean.

• Use this if the toilet paper is not flushed away.



■OSCILLATE

 
The wand moves back and forth to wash your rear thoroughly.

■PULSATE


Washes with the water pressure pulsating between soft and strong.

※ The feature toggles between "ON/OFF" each time the switch is pressed.

■ You can flush the toilet bowl using the manual lever (for toilet bowl flushing in power failure) during power failure.

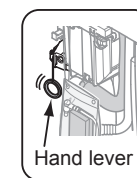

 ■ The toilet bowl can also be flushed clean using the buttons on the left side of the Washlet.

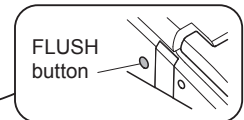


More comfortable! More Energy-Savings!

How to Use

List of menus that can be set by remote control.


The setting menus and their number differ according to the model.

 Remoto control back side

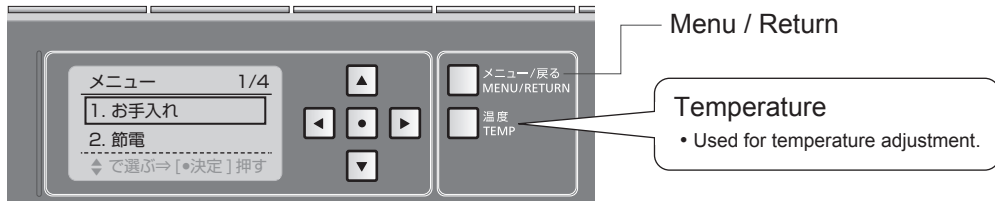

How to set

 1 Press メニュー/戻る MENU/RETURN



• The display screen changes.

2 Set the item from the display screen.



When you move the buttons (Up/Down), the frame of the item moves.



When you move the buttons (Right/Left), you can select "Enter".



 
When you press the button, the item is entered.

※The display goes out when no button on the remote control is pressed for about 60 sec or more.

You can set as desired

If you want to return to the previous item, press the メニュー/戻る MENU/RETURN button.

Number of menus on the display screen

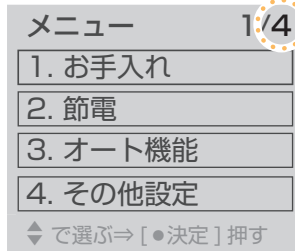

1st Stage

2nd Stage

お手入れ 1/1
1. ノズルそうじ開始/停止

節電 1/2
1. おまかせ節電
2. タイマー節電

オート機能 1/2
1. オート便器洗浄
2. せいけつ

その他設定 1/5
1. 凍結防止
2. 電子音
3. 水勢洗浄位置記憶
4. 便器洗浄水量 6Lモード
5. 便器洗浄水量 8Lモード

タイマー節電 1/1
1. 節電時間

オート便器洗浄 1/2
1. オート設定
2. 水が流れるまで

せいけつ 1/4
1. ノズルきれい
2. プレミスト
3. 脱臭
4. オートパワー脱臭