

# Standard Use

Press a button on the remote control; a beep sounds when the top unit receives the signal.

## Washing

For washing rear using mild water pressure.

Cleanses your rear.

Cleanses your front (for ladies).

### OSCILLATING


- If you press the button again during use, the wand moves back and forth so that you can wash your rear thoroughly.

## Drying

Dries wet parts using warm air.

## Stopping

Stops the operation.

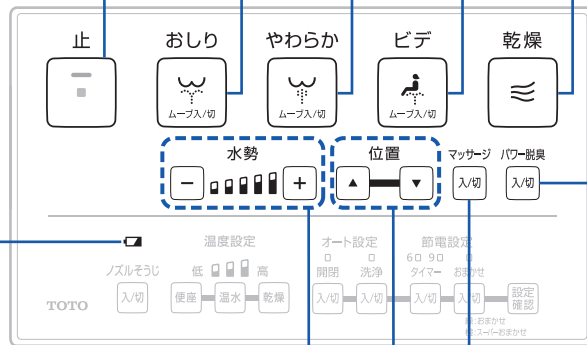

Low Battery warning mark

**POWER DEODORIZER**  
• Increases air suction power for powerful deodorization.

● The function that can be used when you press the “REAR”, “SOFT REAR” or “BIDET” button during use.

■ **MASSAGE** • Washes with the water pressure pulsating between soft and strong.

### ■ WATER PRESSURE ADJUSTMENT (5 steps.)

- If you press the water pressure adjustment button, the lamp lights for about 10 seconds at the preset position.
- If you press a wash button (Rear, Soft or Bidet), the lamp lights for about 10 seconds at the preset position.



### ■ WASH POSITION ADJUSTMENT (5 steps.)

- The wand returns to the standard position (3rd step) each time the wash button (“REAR”, “SOFT REAR” or “BIDET”) is pressed.

## Flushing


Full flush

Half flush

## OPEN / CLOSE




Opens and closes the toilet seat.

Toilet lid opens and closes.


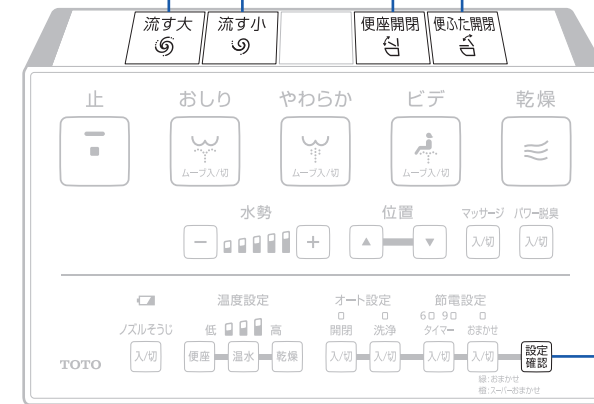


Setting confirmation  
• The current settings can be checked from the LED.

■ You can flush the toilet bowl using the manual handle or manual lever (for toilet bowl flushing in power failure) during power failure.

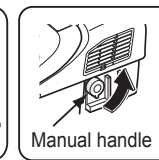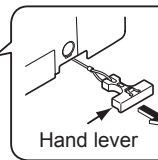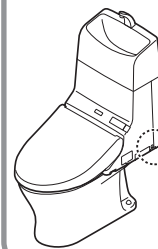

■ The toilet bowl can also be flushed clean by the FLUSHING button.

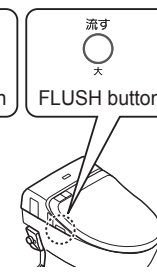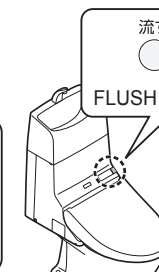


More comfortable! More Energy-Savings!

# How to Use

## Temperature Adjustment


Temperature can be changed to "Warm Water", "Toilet Seat" and "Warm Air" (only models equipped with warm air dryer)

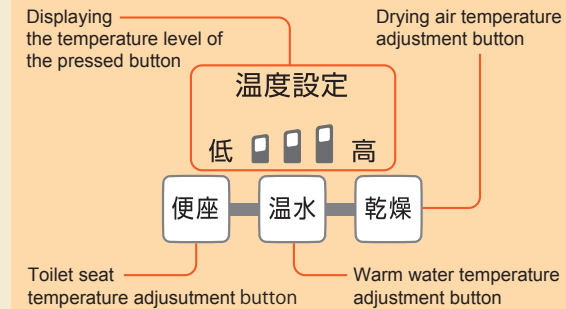

- 1 便座 温水 乾燥


Press the button of the temperature you want to change.

- 2 Press the button selected in step 1 repeatedly until a desired temperature level lights up.

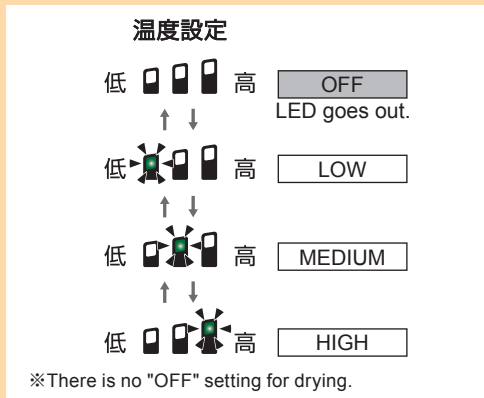

If the button is not pressed for about 10 seconds, the temperature adjustment LED will go off, but the setting will be retained.

If the temperature adjustment LED goes out before the setting is completed, start all over again at step 1.

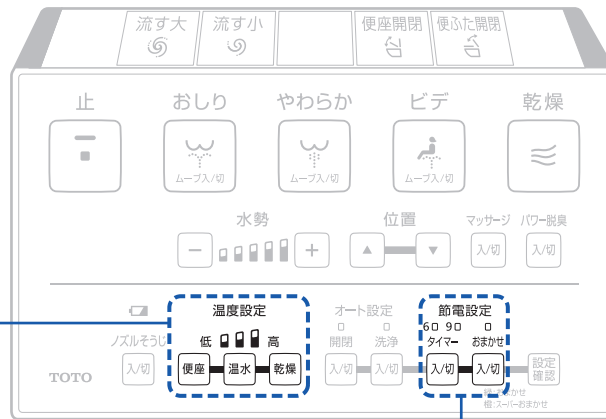


## Energy Saver Features

### Auto energy saver

The Washlet memorizes the time slot when the toilet is used less frequently and lowers the toilet seat temperature automatically to save energy.

### Auto energy saver plus

In addition to the auto energy saver feature, it automatically turns off the toilet seat heater during time periods when the toilet is never used.

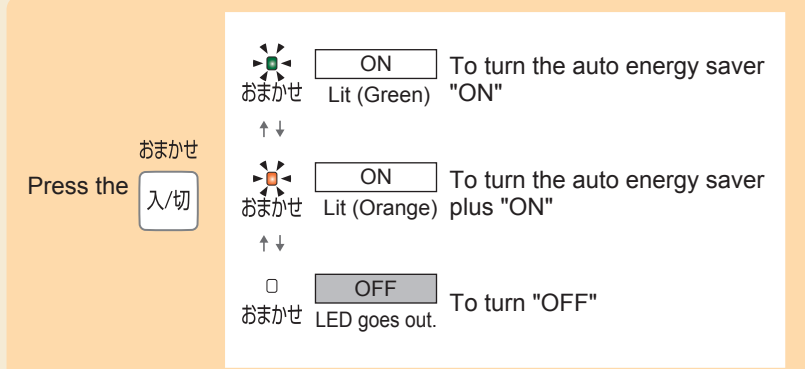

### Timer energy saver

Once set, the toilet seat heater turns off everyday at that time to save energy. (The energy-saving time period can be set to 6 or 9 hours.)

Example When using energy-saving function for 6 hours(1:00 - 7:00am).

When the time (1:00 am) you want to start energy saving function is reached, press the タイマー 入切 button repeatedly until the "6" LED lights up.



Setting completed

