

Standard Use

◆“Washlet” is a registered trademark of TOTO LTD.

Operate the controls on the remote control; a beep sounds when the main unit receives the signal.

Washing

- Washes your rear.
- Washes your rear with soft embracing water flow.
- Serves as a bidet for ladies.
- Gently washes a wide area.

The washing mode changes each time you press the button.

Stopping

Stops rear washing and other operating functions.

Flushing


- Performs a full flush.
- Performs a light flush. A small volume of water is used to flush the toilet bowl clean.
 - Use this if the toilet paper is not flushed away.

Opening and closing

- Opens and closes the toilet seat.
- Opens and closes the toilet lid.

Drying

Dries your rear.

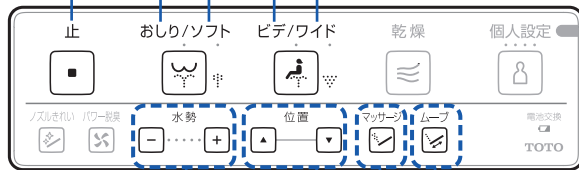

Low battery warning mark

Functions that operate when a button is pressed during "Rear", "Rear soft", "Front" or "Wide front".

Water pressure adjustment (5 levels)

• After you press the "Water pressure adjustment" button, the set position will light for 10 seconds.



• If you press a wash button (REAR, REAR SOFT, FRONT or WIDE FRONT), the lamp lights for about 10 seconds at the preset position.



Oscillating washing

The wand moves back and forth to washes your rear thoroughly.

Pulsating washing

Washes with the water pressure pulsating between soft and strong.

Wand position adjustment (5 levels)

Once use of the remote control is finished, the settings will return to the initial setting (3rd position) after a while.

Wand CLEAN

Cleans the wand with electrolyzed water.

Power deodorizer

Increase suction power and remove odor.


Personal setting

Up to four people can register their preferred "Water pressure", "Wand position" and "Warm water temperature" settings.

●To use

1. Press the button to turn on the LED for the location of your setting.
2. Press the wash button you want to use (Rear washing, etc.)


個人設定

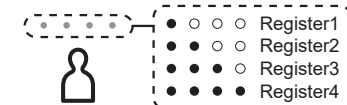

More comfortable! More Energy saver!


How to Use

Remote control back side

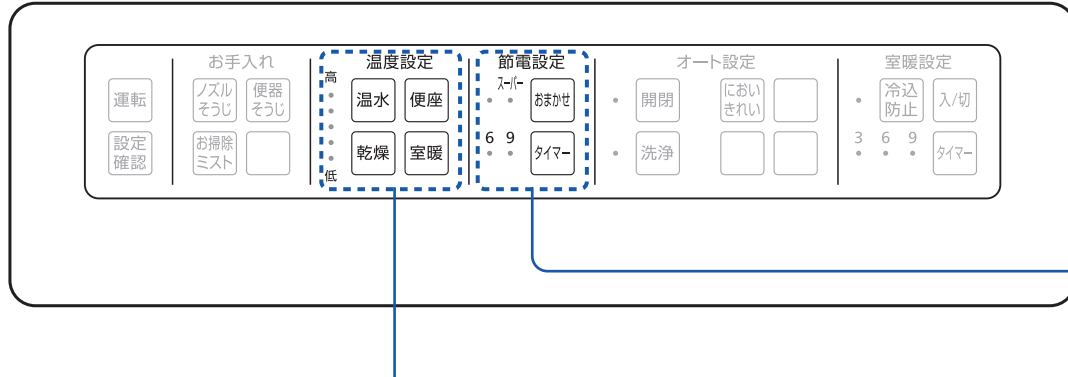


Temperature Adjustment (5 levels)

Displaying the temperature level of the pressed button

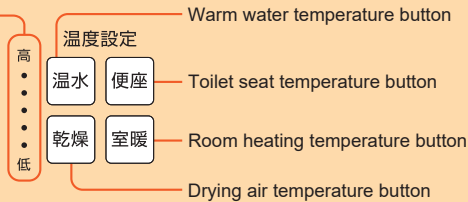

- 1 Choose and press the button of the temperature that you want to set.
- 2 Press the button selected in step 1 repeatedly until a desired temperature level illuminates.

The setting changes each time the button is pressed once

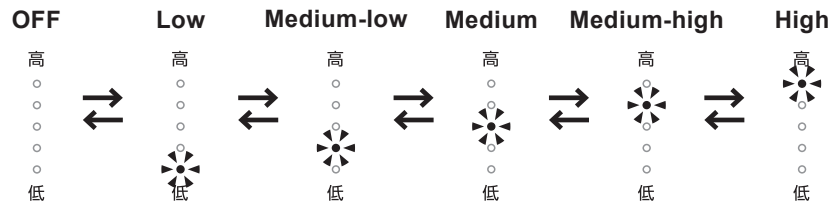

*The "Drying" cannot be turned "OFF".

Energy saver features

Auto energy saver

The product detects time periods with infrequent use and lowers the toilet seat temperature automatically.

● It takes about 10 days for the product to determine the periods when it is used relatively less frequently.


*For instant heated seat, "Auto energy saver" is not set since the seat is not kept warm when not in use.

Auto energy saver+

In addition to the "Auto energy saver" feature, it automatically turns off the toilet seat heater during time periods when the toilet is not used.

You can turn the feature ON/OFF at your discretion.

The setting changes each time the button is pressed once

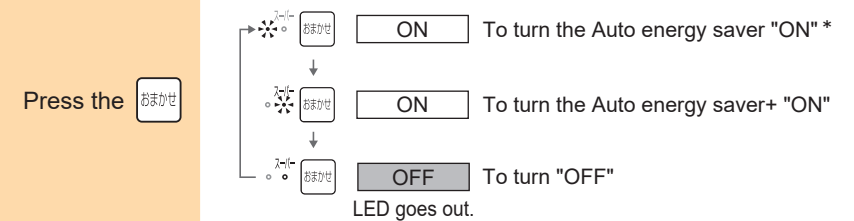

*For instant heated seat, the LED lights up but the feature is not set.

Timer energy saver

Once the time is set, the toilet seat heater and other features turn off automatically during the set time period every day. (The energy-saving time period can be set to 6 or 9 hours.)

Example When using energy-saving function for 6 hours(1 am - 7 am).

When the time (1 am) you want to start energy saving function is reached, press the 'タイマー' (Timer) button repeatedly until the "6" LED lights up.

